

Ref.: 156.710



n° 710



VW CADDY / MAXI CADDY



01/2011>

VW CADDY COMBI / MAXI CADDY COMBI


01/2011>

VW CADDY VAN / MAXI CADDY VAN

01/2011>












+




= **100kg max.**

Se conformer aux instructions du constructeur en ce qui concerne la charge maximale autorisée du véhicule.
 Per quanto attiene il carico massimo consentito del veicolo, attenersi alle istruzioni del costruttore.
 Siga las instrucciones del constructor relativas a la carga máxima autorizada del vehículo.
 Respeitar as instruções do fabricante relativamente à carga máxima autorizada do veículo.
 Do not exceed the maximum carrying capacity given in your vehicle's owner's manual.
 Die Anweisungen des Fahrzeugherstellers für die zulässigen Höchstlasten für das Fahrzeug sind zu beachten.
 De aanwijzingen van de autofabrikant opvolgen wat betreft maximaal toegestaan laadvermogen van voertuig. Altijd de geldende voorschriften aanhouden.

NO




OK





NO

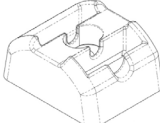





x6
3211500001




x2
1570901




x2
1570906




x2
1570902




x2
1570007




A




M8
x6
5732845B




Ø8
x6
6592.08B




M8
x6
5586.08B

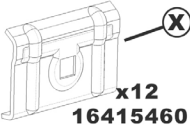


x12
164154601

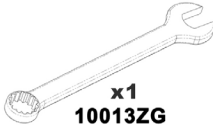


x1
100132G




B




M8x65B
x4




M8x50B
x2




Ø8
x6
211500002




Ø8
x6
6592.08B




Ø8
x6
6798.08B

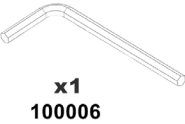

x1
100006



C







Ø8
x6
3081B







VOLKSWAGEN CADDY MAXI 01/2011->

VOLKSWAGEN CADDY MAXI COMBI 01/2011->

VOLKSWAGEN CADDY MAXI VAN 01/2011->

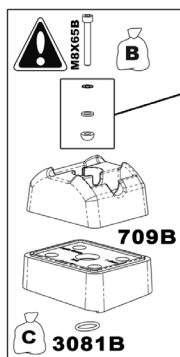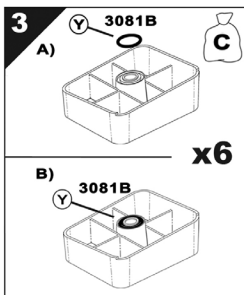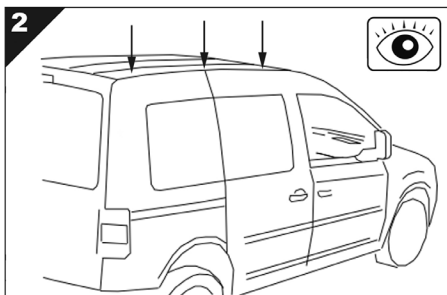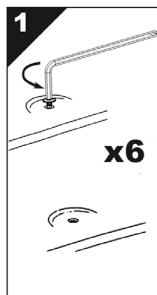





- 6798.08B
- 6592.08B
- 2115000002

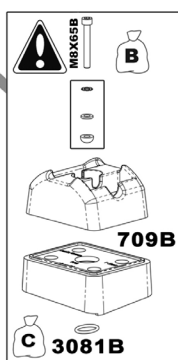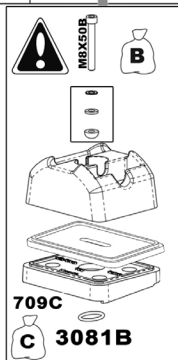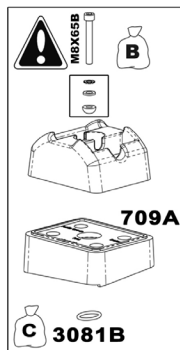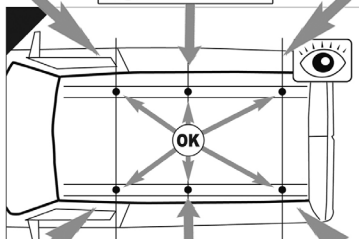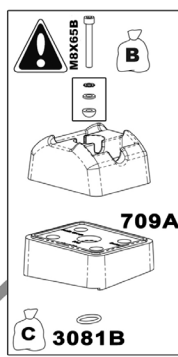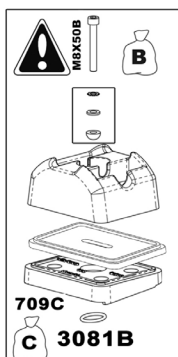







VOLKSWAGEN CADDY 01/2011->

VOLKSWAGEN CADDY COMBI 01/2011 ->



VOLKSWAGEN CADDY VAN 01/201->

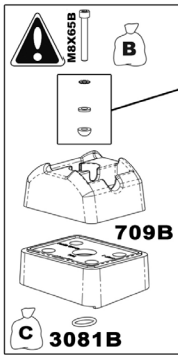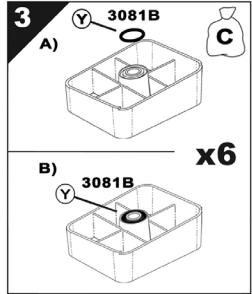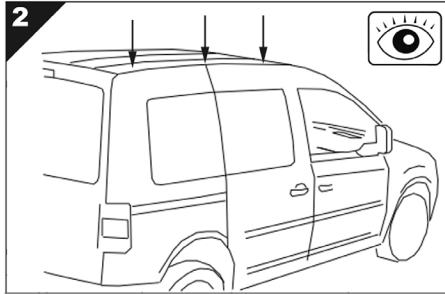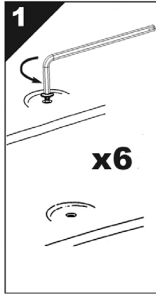


- 6798.08B
- 6592.08B
- 211500002

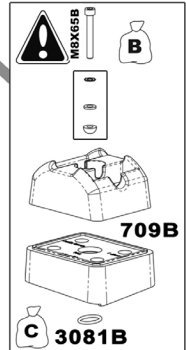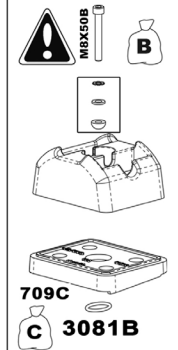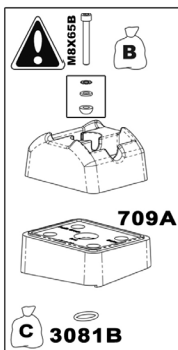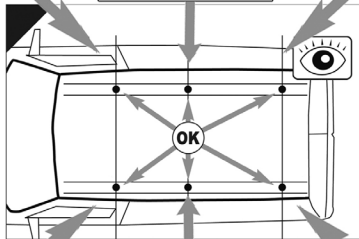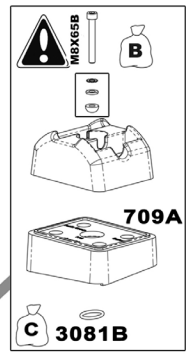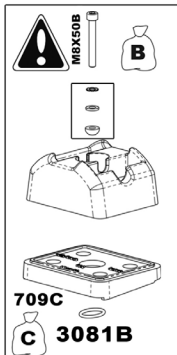


4

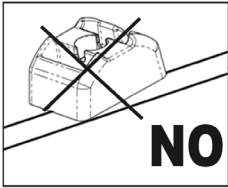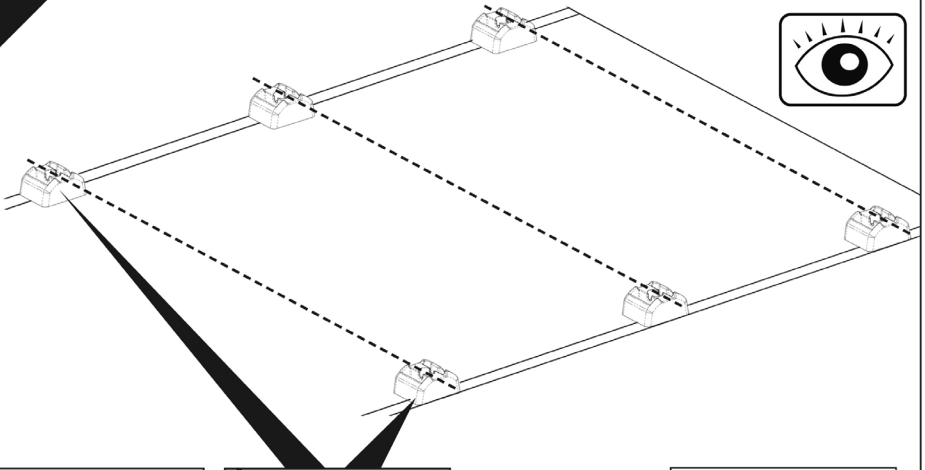

NO


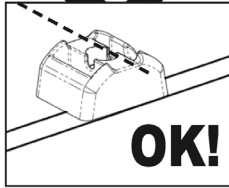


OK!

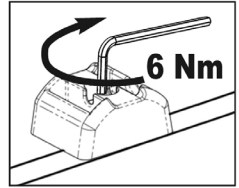

6 Nm

5

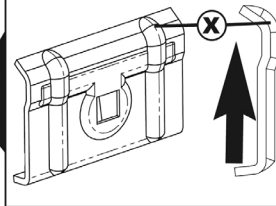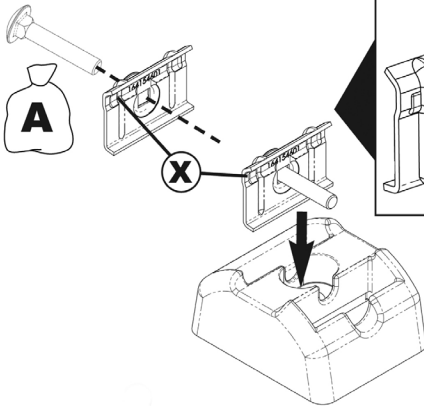

OK!



NO

