



Thule XT Kit 3044

> Instructions

VW California, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-





VW Caravelle, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-

VW Multivan, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-

VW Shuttle, 4-dr Bus, **(T5)** 03-15, **(T6)** 15-

VW Transporter, 4-dr Van, **(T5)** 03-15, **(T6)** 15-

This kit is only for vehicles with fixpoint mounting or T-profile.






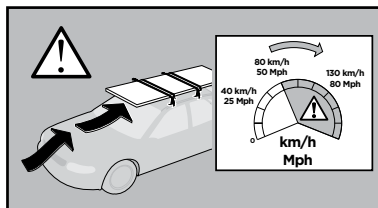
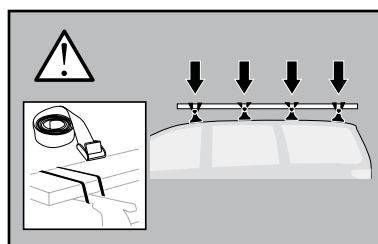
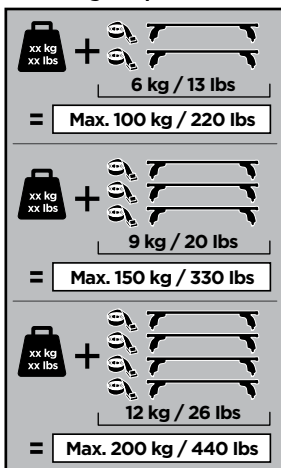
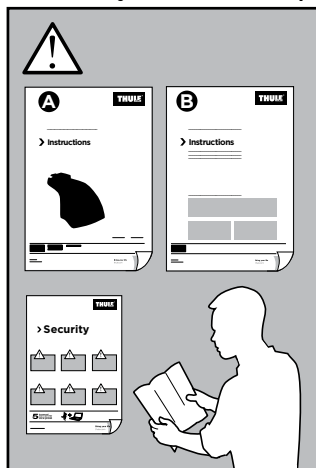


ISO 11154-E





183044

C.20150806
509-3044-04


Bring your life
thule.com

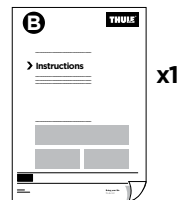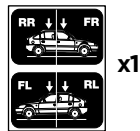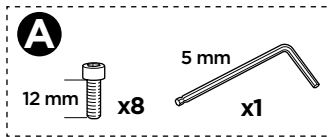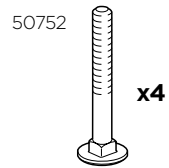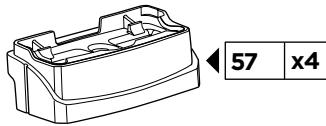



1

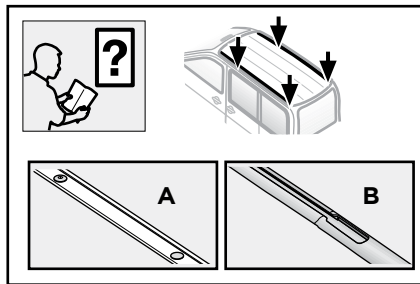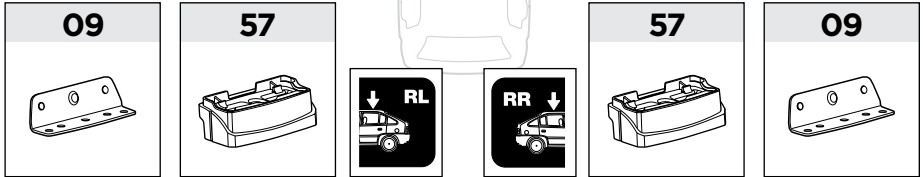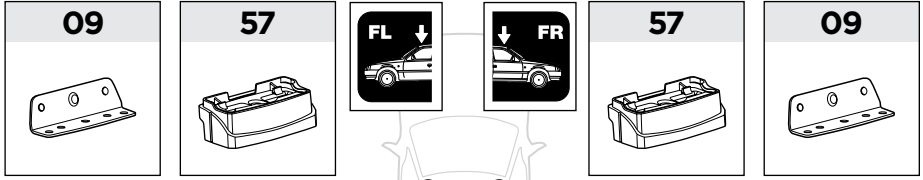


2 **A**

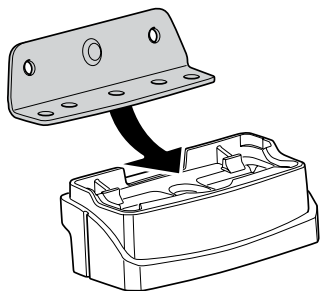


B

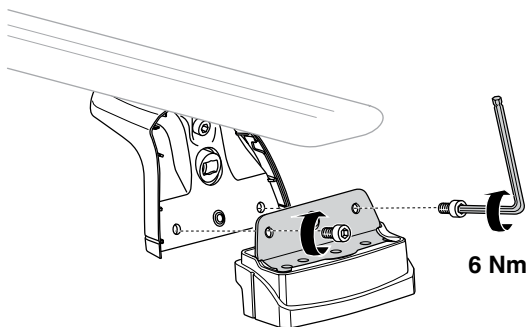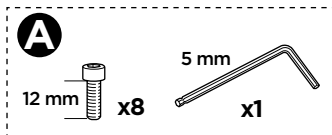


3







x1

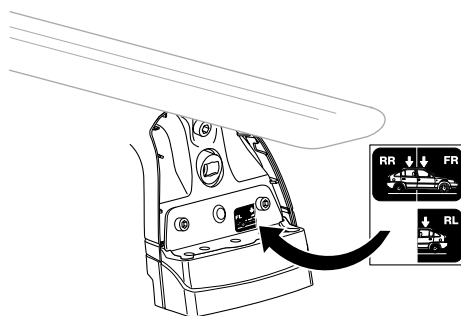


4




A

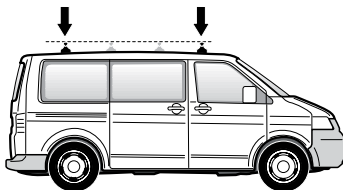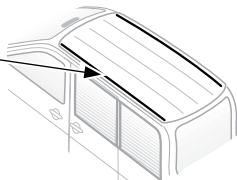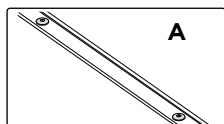


A

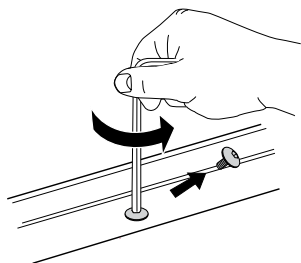


B

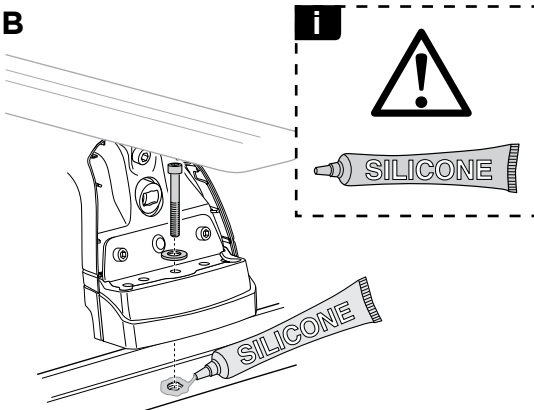






C

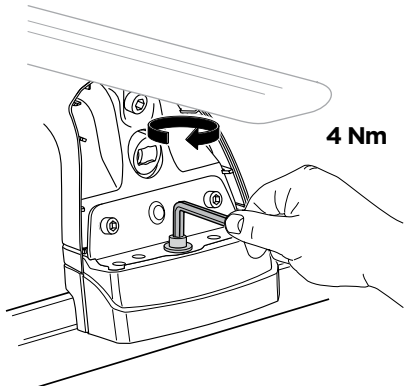



D

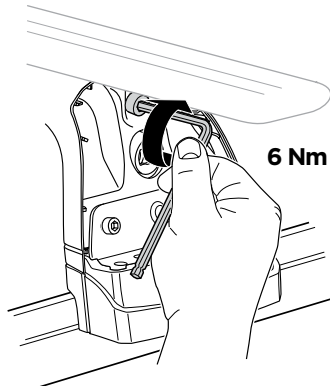


4

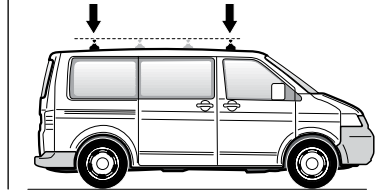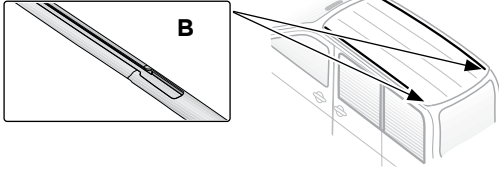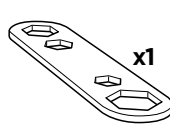


A

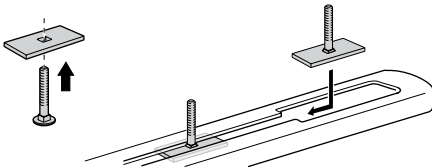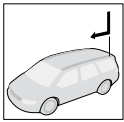

B

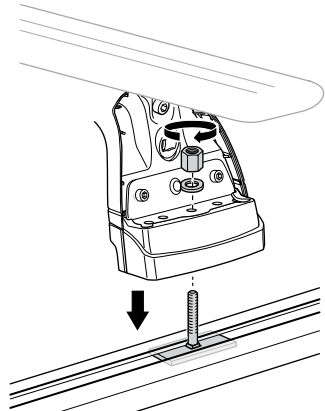

C

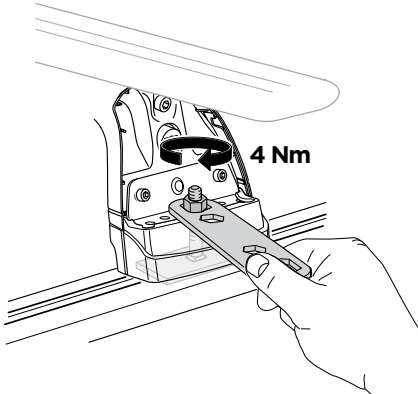

D

